


Enable-IT 860 Pro Rev B Professional Grade Ethernet Extender Kit Quickstart Guide

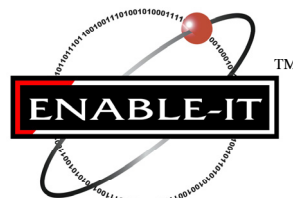


INSTALLING THE 860 PRO ETHERNET EXTENDER KIT

The Enable-IT 860 Pro Ethernet Extenders have a distance restriction of 6,000ft (1,829m) over 1-pair of Category 2, up to 4-pair CAT5e / CAT7, wiring from device extension to device extension. Therefore quick, simple site surveys and installation planning are highly recommended.

Perform An Out Of The Box Test (OOTBT)

We highly recommend that you perform a quick test to ensure the working order of your Enable-IT 860 Pro Ethernet Extender units prior to installing. To do this, please use one of the Ethernet patch cords provided and attach to the 860 Pro Interlink port of each 860 Pro unit. Power up both 860 Pro units using the provided 5v DC adapter. The Green Sync LEDs will start flickering slowly and then fast as the units talk to each other. After a few seconds you should see a solid Green Interlink Sync LED on each unit to confirm a link is established. This confirms basic proper operation of the units. Next for a more detailed test and to confirm your LAN Equipment works with the 860 Pro, connect your Ethernet LAN and remote device to the 860 Pro LAN ports and test connectivity. The Green Interlink Sync LED will pulse rapidly as it detects traffic.

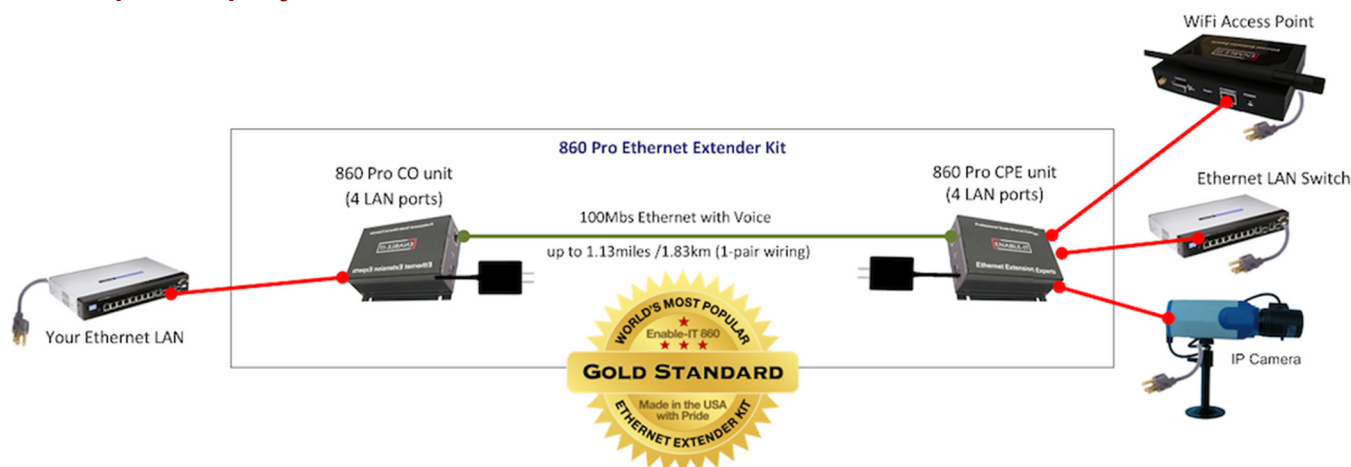

LED indicators will provide visual operational status of the 860 Pro units.

- Mode** – Yellow Solid LED
 - Off = CO unit
 - On = CPE unit
- Sync** – Green slow to fast flicker LED on power up – indicates negotiation of a link
 - Green solid LED indicates link established and rapid pulse is traffic
- Act** – Yellow LED
 - Off = No device attached or detected
 - On = Solid, indicates the presence of local LAN
 - On = Blinking, indicates the presence of local LAN traffic
- Pwr** – Green Solid LED indicates the unit is receiving 5v power

Performing The On-Site Installation

After removing the Enable-IT 860 Pro Ethernet Extender Kit from the box, and performing the Out Of The Box Testing (OOTBT), all that remains to install the unit on-site is to mount the unit, build the interconnect wiring, add voice lines if needed, and attach the LAN device cabling with the provided Ethernet Patch cords.

❶ Mounting The Enable-IT 860 Pro Ethernet Extender Units


The Enable-IT 860 Pro extended Ethernet solution is designed for quick wall mounting. Choose a location to mount each of the Enable-IT 860 Pro's where the maximum distance does not exceed 6,000ft (1,829m) total between devices to be connected. When wall-mounting the Enable-IT 860 Pro unit it is recommended that you use the appropriate screw anchors for your mounting surface. If mounting on existing plywood use wood screws; if mounting onto drywall or sheetrock, use plastic drywall anchors to secure your installation.

❷ Building The 860 Pro Interlink Wiring

The most important aspect of the installation is the correct wiring of the Interlink cabling.

The 860 Pro Interlink port (RJ-45 interface) carries this 1-pair signaling over the RJ-45 (pins 1 & 2) - used as transport for both voice and data. If you use more than 1-pair of wiring, such as a CAT5 segment, the RJ-45 (pins 3 & 4) are used for voice line 2, and the remaining pins (4,5,7 & 8) can transport native 802.3af PoE, or are unused.

For all wiring you will need to crimp a RJ-45 Male head to each end of the contiguous wire run and using the following (pins 1 & 2) straight through. This will deliver 1 voice line, and Ethernet data. If you desire to use the second voice line, you will need to request our optional dongle that will allow for connecting telephone lines to this interlink wiring. Insert the completed RJ-45 ends into the 860 Pro Interlink port on each 860 Pro unit.

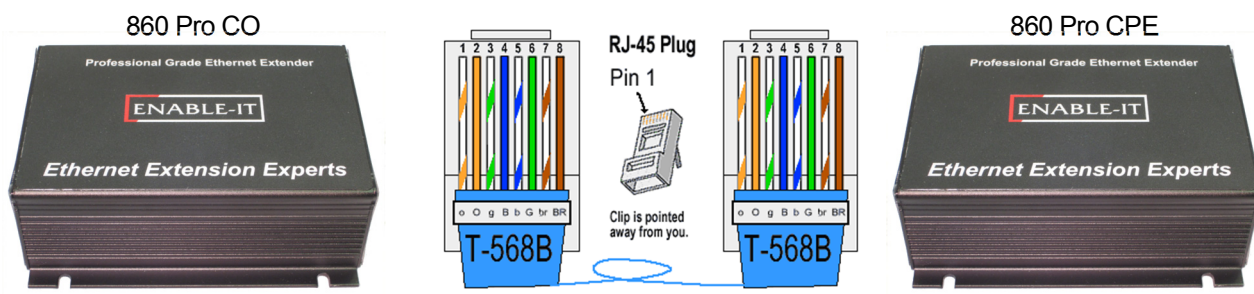

❸ Cabling Devices To The Enable-IT 860 Pro Extended Ethernet Kit

Attach your remote LAN device to the 860 Pro CPE unit LAN ports with Ethernet patch cord provided. Attach your local LAN to the 860 Pro CO LAN ports with Ethernet patch cord provided. Attach the power adapters to both 860 Pro units.

Attach your local Interlink cabling end to the 860 Pro CO unit Interlink port – Then do the same for the remote end and plug into the 860 Pro CPE unit Interlink port. The Sync LED's will flicker in a sequence talking to each other until they go solid. Your equipment should now be powered up and functioning.


LED indicators will provide visual operational status of the 860 Pro units.

④ Troubleshooting

First examine the backbone wiring pair and make sure you have solid connections. The Interlink Sync LED will be lit solid Green with rapid pulsing on each 860 Pro unit to show proper connection and pairing. If the Interlink Sync LED Link is flashing slow to fast and never goes solid.... Then follow the steps below:

- 1) Make sure your wiring is straight through and not connected to any Telco punch down blocks; If so remove from the block and use Telco butt clips to bridge wire.
- 2) Check for a firm connection of the RJ-45 connections in each 860 Pro unit, and power is applied to the 860 Pro CO & CPE units.
- 3) **You can easily isolate any issue by performing an Out Of The Box Test (OOTBT). This test will confirm the correct working order of your Enable-IT 860 Pro Ethernet Extender Kit. This will point to a possible issue with your long distance Interlink wiring being affected by possible outside interference.**

Performance Settings (DIP Switch)

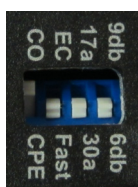

If you are experiencing performance issues with your Ethernet connection you may use the following DIP switch settings to adjust your application. For DIP switch 2-4 you must toggle both symmetrically, in other words the CO and CPE must match. If you turn DIP switch 3 Up (Off) on the CO, then you must do so for the CPE and vice-versa.

- Switch 1: CO / CPE Mode
CO Mode – Up / Off Position
CPE Mode – Down / On Position
Central Office Equipment (CO) is generally the equipment residing at the Carrier Telephone office or the head end of a circuit. Customer Premise Equipment (CPE) is generally the equipment residing on the customer side of a circuit. Typically you would place the CO at the local end and the CPE at the remote end for reference only. CO's only communicate with CPE's.
- Switch 2: Error Correction Mode
Interleaved Error Correction Enabled – Up / Off Position – degrades performance
Fast Channel – Down / On Position (Default)
Interleaved Error Correction works better for file transfers, where the delivered data must be error free but latency incurred by the retransmission of error packets is acceptable. Fast channel is preferred for streaming multimedia, where an occasional dropped bit is not noticeable or acceptable.
- Switch 3: 17a (over 1,500ft) / 30a (under 1,500ft) Mode
17a Mode – Up / Off Position
30a Mode – Down / On Position (Default)
17a mode is only used for Interlink runs over 1,500ft to 6,000ft.
30a mode is only enabled for Interlink runs under 1,500ft.
- Switch 4: Signal-to-noise Noise Ratio (SNR)
9dB – Up / Off Position
6dB – Down / On Position (Default)
Signal-to-noise ratio is a measurement that refers to how much noise is in the output of a device, in relation to the signal level. If you experience issues of noise bleeding over the lines, or high interference in your environment, it is suggested that you switch to 6dB SNR. This may help clean up any noise bleeding over your cabling.

TECHNICAL SUPPORT

Enable-IT, Inc.'s Customer Care Team support is available directly to customers and distributors. All support requests are processed through the online support portal. This allows us to provide assigned support ticket numbers in order to bring closure to any technical issues.

Online Technical Services

The Enable-IT Support Portal is available 24/7 to open a ticket or check the status of one. Please use this support website as your first source for help as it contains an on-line knowledge base of articles, documentation, FAQ's and other problem-solving resources. This web-based support resource provides the quickest solution to the most common technical support issues.

World Wide Web Site

<http://support.enableit.com>

Returning Products for Warranty Repair

Enable-IT, Inc. warrants to the original purchaser of the Product ("you" or the "End User") that, for the four (4) year period commencing on the date the Product was purchased (the "Warranty Period"), the Product will be substantially free from defects in materials and workmanship under normal use and conditions. **Electrical damage is not an item that is covered under this warranty, extended warranties or Advanced Replacement Program (AREP).**

In order to obtain an authorized RMA approval, the End User must complete the required information online located at <http://support.enableit.com>. If you have questions or difficulty completing this information you may contact the Customer Care Team at 888-309-0910 between the hours of 8:00 a.m. and 5:00 p.m. PT.

Please ship Authorized RMAs to:

Enable-IT Processing Facility
16600 Harbor Blvd, Suite I
Fountain Valley, CA 92708-1363

Returning Products for Refund

Enable-IT, Inc. offers a generous 45-Day refund on a single Ethernet Extender Kit only, and is subject to a 15% Restocking Fee. Shipments without a valid or authorized RMA number, or sent to our corporate Las Vegas address, can be refused and / or billed for additional shipping.

ENABLE-IT, INC. LIMITED WARRANTY

Enable-IT, Inc. warrants the Enable-IT 860 Pro Ethernet Extender Kit solely pursuant to the following terms and conditions.

1. PRODUCT WARRANTY.

a. Express Warranty.

Enable-IT warrants to the original purchaser of the Product ("you" or the "End User") that, for the four (4) year period commencing on the date the Product was purchased (the "Warranty Period"), the Product will be substantially free from defects in materials and workmanship under normal use and conditions. This warranty does not apply to Products, which are resold as used, repaired or reconditioned, or consumables (such as batteries) supplied with the Product. **Electrical damage is not an item that is covered under this warranty or extended warranties.** Enable-IT does not make any warranty with respect to any third party product, software or accessory supplied with or used in connection with the Product and such third party products, software and accessories, if any, are provided "AS IS." Warranty claims related to such third party products, software and accessories must be made to the applicable third party manufacturer.

b. Remedies for Breach of Warranty.

In the event of a breach of the foregoing warranty, Enable-IT will, in its sole discretion and at its cost, and subject to the terms of the following paragraph, repair the non-conforming Product, replace the non-conforming Product with a new or reconditioned Product or refund the purchase price for the Product. Any new or reconditioned Product provided pursuant to this paragraph is warranted as provided herein for the remainder of the original Warranty Period. THE REMEDY SET FORTH IN THIS PARAGRAPH SHALL BE THE END USER'S SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE FOREGOING WARRANTY.

c. Conditions for Warranty Qualification.

If authorized by Enable-IT to return a Product which does not conform to the warranty set forth above, the End User must: (1) obtain a return materials authorization (RMA) number from Enable-IT by contacting the Customer Service Dept. at 888-309-0910 between the hours of 8:00 a.m. and 5:00 p.m. PST and otherwise fully comply with Enable-IT's then-current RMA policy; (2) return the Product to Enable-IT in its original packaging freight pre-paid; and (3) provide to Enable-IT the original receipt or bill of sale establishing the date on which the Product was purchased. Products returned to Enable-IT without an RMA number will be returned to the End User. Enable-IT shall not be responsible for damage or loss during shipment of the returned Product to Enable-IT.

d. Voiding of Warranty.

The express warranty set forth above shall not apply to failure of the Product if the Product has been subjected to: (i) physical abuse, misuse, improper installation, abnormal use, power failure or surge, or use not consistent with the operating instructions provided by Enable-IT; (ii) modification (including but not limited to opening the Product housing) or repair by any party in any manner other than as approved by Enable-IT in writing; (iii) fraud, tampering, unusual physical or electrical stress, unsuitable operating or physical conditions, negligence or accidents; (iv) removal or alteration of the Product serial number tag; (v) improper packaging of Product returns; or (vi) damage during shipment (other than during the original shipment of the Product to the End User from Enable-IT, if applicable).

e. Warranty Disclaimers.

THE EXPRESS WARRANTY SET FORTH ABOVE IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, ORAL, EXPRESS OR IMPLIED. ENABLE-IT

DISCLAIMS, TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF THIRD PARTY RIGHTS. NO PERSON (INCLUDING WITHOUT LIMITATION, ENABLE-IT'S EMPLOYEES, AGENTS, RESELLERS, OEMS OR DISTRIBUTORS) IS AUTHORIZED TO MAKE ANY OTHER WARRANTY OR REPRESENTATION CONCERNING THE PRODUCT. IF THE DISCLAIMER OF ANY IMPLIED WARRANTY IS NOT PERMITTED BY LAW, THE DURATION OF ANY SUCH IMPLIED WARRANTY IS LIMITED TO ONE (1) YEAR FROM THE DATE OF PURCHASE. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY MAY LAST, SO SUCH LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. THIS WARRANTY GIVES THE END USER SPECIFIC LEGAL RIGHTS AND THE END USER MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM JURISDICTION TO JURISDICTION. ENABLE-IT DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCT WILL BE UNINTERRUPTED OR ERROR FREE. ENABLE-IT IS NOT RESPONSIBLE FOR ANY DAMAGE TO OR LOSS OF ANY PROGRAMS, DATA, OR OTHER INFORMATION STORED ON OR TRANSMITTED USING THE PRODUCT.

2. LIMITATION OF LIABILITY.

IN NO EVENT SHALL ENABLE-IT BE LIABLE TO THE END USER, OR ANY THIRD PARTY, FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH OR ARISING OUT OF THE SALE OR USE OF THE PRODUCT (INCLUDING BUT NOT LIMITED TO LOSS OF PROFIT, USE, DATA, OR OTHER ECONOMIC ADVANTAGE), HOWEVER IT ARISES, INCLUDING WITHOUT LIMITATION BREACH OF WARRANTY, OR IN CONTRACT OR IN TORT (INCLUDING NEGLIGENCE), OR STRICT LIABILITY, EVEN IF ENABLE-IT HAS BEEN PREVIOUSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGE AND EVEN IF A LIMITED REMEDY SET FORTH IN THIS AGREEMENT FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL ENABLE-IT'S LIABILITY TO THE END USER, OR ANY THIRD PARTY, EXCEED THE PRICE PAID FOR THE PRODUCT. BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO THE END USER.

3. LICENSE AND LIMITATIONS.

The firmware and software embedded in the Product (the "Embedded Software") are licensed to you. Your use of the Product is your acceptance of the warranty terms above and the terms below. You may use the Embedded Software solely in conjunction with your use of the Product. All worldwide right, title and interest in and to the Product, or any portion thereof (including but not limited to the Embedded Software), including all copyrights, patent rights, trademarks, trade secrets, and other intellectual property rights therein and thereto, are and shall remain the exclusive property of Enable-IT and/or its licensors. You acknowledge and agree that you may not, and may not allow any third party to, (i) use the Embedded Software in a manner that is inconsistent with the above express right granted to you or (ii) modify, distribute, reproduce, decompile, disassemble, reverse engineer or otherwise attempt to discover the source code for the Embedded Software.

CONTACT US

Sales and Customer Care:

Toll Free US and Canada

888 309-0910

866 389-8605 Fax

Other International

+1 702 924-0402

+1 702 800-2711 Fax

E Mail

sales@enableit.com

support@enableit.com

RMA Support:

<http://support.enableit.com>